CT18M/CT22M Manual

Quick Start Guide

Front View

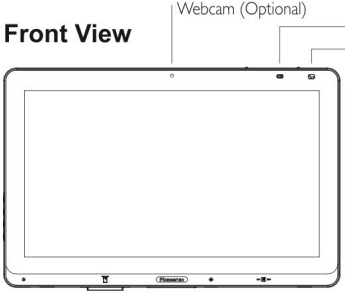

- Green = System on
- Blinking Green = System Sleep
- Off = System Off

While Charging
- Amber = Charging
- Blinking Amber = System Sleep or Off
- Off = Fully Charged

Bottom View

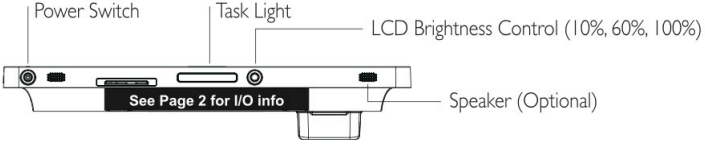

Back View

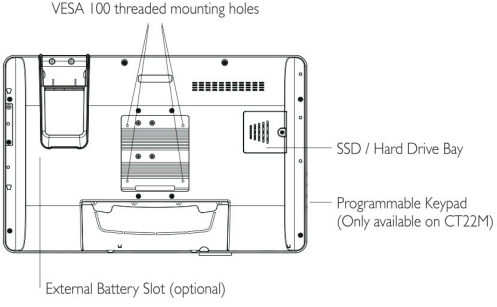

Support@PioneerSolution.com
©Pioneer Solution, Inc. 2025 (909) 468-9757 x2

Pioneer

I/O info Part Number: QXX-YXXXXX-XX

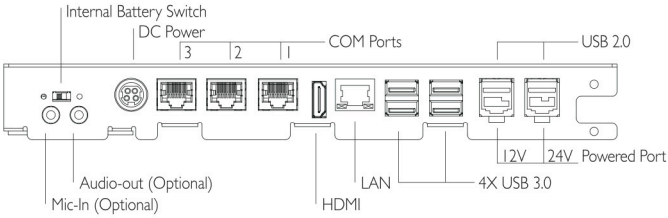

I/O info Part Number: QXX-MXXXXX-XX

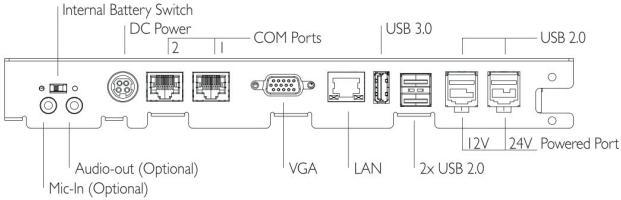

Setup Information:

AC-powered Model:

1. Connect the power adapter (included) to a wall outlet.
2. Plug the DC connector end from adapter to DC power port on the CT18M/CT22M.
3. Power up terminal by pressing the power switch.

Battery-powered Model:

1. Switch on the internal battery switch.
2. Charge CT18M/CT22M terminal via power adapter for 8-hours.
3. Insert a fully-charged battery into the battery slot on CT18M/CT22M.
4. Power up terminal by pressing the power switch.

IMPORTANT!!

- Make sure the external battery (sold separately) is fully charged before use.
- Batteries can be charged on a CT18M/CT22M connected to a DC power source or via the mBAY charging station.
- CT18M/CT22M terminal will beep continuously when no external battery is detected /DC power is not connected.

Optional Accessories

4HB-CBA02:
mBAY 4 battery charging station, black

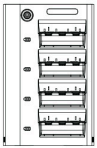

4HW-CBA02:
mBAY 4 battery charging station, white

4HG-BAT03:
External Battery Pack

Support@PioneerSolution.com
©Pioneer Solution, Inc. 2025 (909) 468-9757 x2